

Historic, archived document

Do not assume content reflects current scientific knowledge, policies, or practices.

Have later edition

U. S. DEPARTMENT OF
AGRICULTURE
FARMERS' BULLETIN No. 1630

IRRIGATION PRACTICES IN GROWING ALFALFA



BECAUSE of the rapidity of its growth and the number of cuttings obtained during a season, alfalfa requires more water than most crops. Nevertheless water should be applied carefully in order to avoid waste and to prevent injury from over-irrigation.

There are several methods of applying water to alfalfa, their suitability depending on the character of soil and subsoil, climate, water supply, size of farm, and other factors. The most common are the border and check methods, and flooding from field ditches.

The border method consists of dividing a field into long narrow strips, by low levees, extending usually in the direction of the steepest slope. This method can be used best where large streams of water are available to the farmer.

The check method consists in surrounding nearly level plots of ground with low levees. The most favorable conditions for this method are light, sandy soils on an even slope of 3 to 15 feet to the mile or heavy soils on which it is necessary to hold water for some time in order that it may percolate to the desired depth.

Flooding the field from laterals or small ditches is a common method in the Rocky Mountain States. It can be used to advantage on slopes that are too steep for other methods. It costs little to prepare fields for flooding and the method is adapted to the use of small streams of water.

No fixed time can be recommended for watering alfalfa. In general it is best to irrigate as late as possible before the cutting and again after the crop has been removed if water is then needed. The appearance of the alfalfa, especially the color of the leaves, is an aid to the farmer in determining when water is needed.

This bulletin is a revision of and supersedes Farmers' Bulletin 865, Irrigation of Alfalfa.

IRRIGATION PRACTICES IN GROWING ALFALFA

By **SAMUEL FORTIER**, *Principal Irrigation Engineer, Division of Agricultural Engineering, Bureau of Public Roads*

CONTENTS

	Page		Page
The roots of alfalfa.....	1	Methods of irrigating alfalfa—Continued.	
Removing desert plants.....	2	The corrugation method.....	14
Farm systems of irrigation.....	4	Irrigating alfalfa with pumped well water	
Farm ditches.....	5	and portable pipes.....	18
Methods of irrigating alfalfa:		The subirrigation method.....	20
The border method.....	7	Quantity of water required.....	21
The check method.....	10	Number and frequency of irrigations.....	23
Flooding from field laterals.....	11	Rise of ground water and its effects on alfalfa	25

EXPERIENCE in the growing of alfalfa shows that it thrives best in the soil and climate of the arid and semiarid regions provided water is available for irrigation. It prefers a deep, well-drained loam soil, abundant sunshine, and a dry atmosphere, if its roots are well supplied with water. Certain varieties do well in Imperial Valley, Calif., 100 feet below sea level, while other varieties thrive on the San Luis plains of Colorado, 7,500 feet higher.

Over two-thirds of the acreage devoted to alfalfa in the United States is found in the 17 western States. Its importance to these States is due not only to its large acreage but also to its high yield and value.

THE ROOTS OF ALFALFA

Some knowledge of the location, extent, and functioning of the roots of alfalfa is desirable to enable the farmer to apply to the soil within the root zone the proper quantity of water at the right time and in the right way.

The topsoil should be moist enough from recent rains or an irrigation at seeding to supply the water needed by the plant until a number of true leaves appear and the taproot attains a depth of about 2 feet. The long, slender tap root of the young plant has a number of tiny branches throughout its length and when the top soil becomes too dry the branch roots in this area are likely to suffer. Hence an adequate soil moisture content should be maintained, if possible, in all parts of the root zone.

The normal distribution of roots of a mature plant grown in deep loamy soil free from hardpan or ground water may be expected

to conform somewhat closely to that indicated in Figure 1, which shows the weight of the roots in each 6 inches of a plant grown at Davis, Calif. under soil, climatic, and moisture conditions which produced an average seasonal yield of 8.71 tons an acre on 18 plots for a period of four years. The stems of representative plants were cut off just below the crown, and the weight of roots was determined in each 6-inch layer of soil. The fact that the roots near the surface, especially in the top foot of soil, represent a high percentage of the weight of all the roots is accounted for in part by the larger

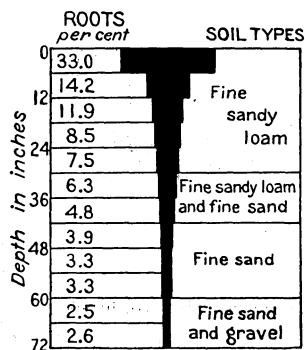


FIGURE 1.—Distribution of alfalfa roots by weight, under favorable conditions

and heavier portion of the taproot in this stratum, which under normal conditions contains also the largest number of branch roots. Ordinarily each foot of soil within the root zone is amply provided with branch roots. By this distribution the plant is enabled to derive the larger part of its soil nutrients from the upper stratum of soil, which generally is most fertile and best aerated, and to obtain part of the water it needs from the deeper roots in wet soil. As a further protection against drought the taproot normally extends beyond the limits indicated in Figure 1. Its objective seems to be a soil that is always moist, and it has been known to penetrate the subsoil to a depth of 30 feet in order to attain it.

Sometimes if the water table stands too high for a considerable period of time and the lower part of the taproot is continuously submerged, the latter eventually decays, causing the plant to suffer. This unfavorable condition is illustrated in Figure 2, which outlines the distribution of the feeding roots of alfalfa with a water table 3 feet below the surface. Where an infertile hardpan underlies a shallow soil, similar results often occur. The plants have no reserve-root zone from which to derive additional moisture and nourishment to overcome the effects of drought and other vicissitudes of a severe climate.

The chief function of the roots of alfalfa is to furnish a quantity of water and plant nutrients in solution adequate to the plant's requirements, which are very heavy. Under ordinary conditions about 750 tons of water is absorbed by the roots, drawn up through the stems, and mostly transpired by the foliage for each ton of cured hay harvested.

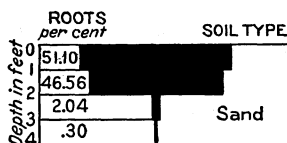


FIGURE 2.—Distribution of alfalfa roots with a water table 3 feet below ground surface

REMOVING DESERT PLANTS

The first step in preparing land for agriculture in the arid portion of the West is to remove the native desert plants. The smaller varieties of sagebrush and greasewood can be removed by deep plowing when the soil is moist. When the growth is 20 to 60 inches high it is removed usually by "railing," grubbing, and plowing. Railing¹

¹ Reproduced from the following publication: BEAN, R. P. DEVELOPING NEW LAND UNDER IRRIGATION. Wash. Agr. Expt. Sta. Pop. Bul. 136, 28 p., illus. 1926.

(fig. 3) consists in hitching a strong team to each end of a railroad rail and dragging it across the field. This process results in breaking off the shrubs at the ground surface. Subsequently they are raked into windrows and burned. On lands densely covered with heavy shrubs it may be necessary to do a second railing in the opposite direction, after which the brush is again raked and burned. The field (especially the knolls) is then deeply plowed, and the upturned roots are gathered and burned.

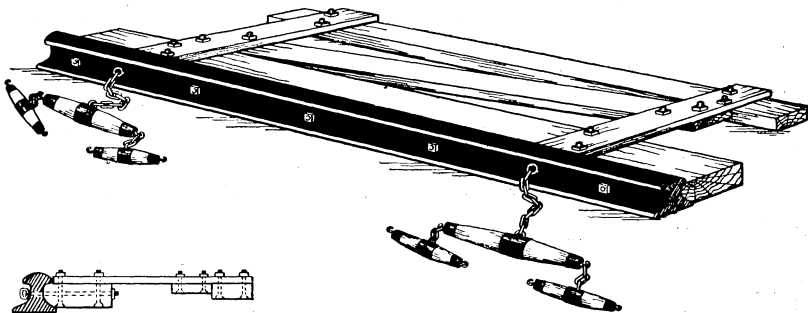


FIGURE 3.—A section of a railroad rail adapted to break down heavy sagebrush

Mesquite, a native of the Southwest, varies from a straggling, spiny shrub under adverse conditions to a widely branched tree under favorable conditions. It is removed ordinarily by hand grubbing.

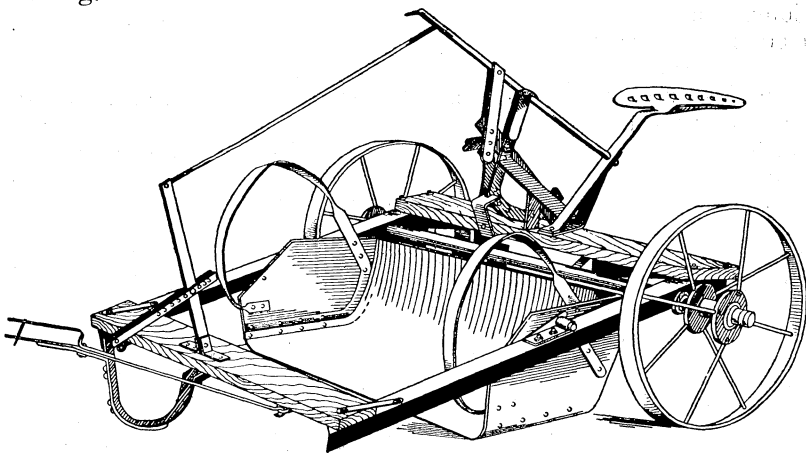


FIGURE 4.—A popular type of wheeled scraper

Preliminary operations in preparing land for irrigation do not always consist merely in getting rid of native vegetation. Sometimes sand dunes or other high spots must be lowered and depressions filled before a properly graded surface can be obtained. The plow and the scraper (fig. 4) are the implements most commonly used for this kind of work, but in recent years heavy scrapers operated by tractors have become popular, largely because of the rapidity with which they can do the work.

In preparing new land for irrigation it is seldom wise to complete the operation during the first season. The land is first roughly prepared and a cereal crop sown, irrigated in a crude way, and harvested. Meanwhile the roots of shrubs have decayed enough to be removed, filled-in soil has settled, and a permanent job of surface grading is possible, preparatory to seeding a perennial crop such as alfalfa.

In the central plain of California and some western valleys alfalfa seeding usually follows many years of continuous cropping to wheat and other small grains. Shallow plowing is the common practice in growing cereals, and when the operation is repeated year after a year a "plow sole" or "cultivation hardpan" is apt to form. This is not a true hardpan but rather a compaction of the finer particles of soil beneath the cultivated stratum. Deep plowing breaks up the plow sole, and by mixing a like quantity of unexposed soil with the topsoil—which long-continued cultivation and cropping have deprived of much of its organic components—the physical texture is improved. By following this course, worn-out grainfields which did not produce a profitable crop of grain have yielded in one season as high as 9 tons per acre of alfalfa.

FARM SYSTEMS OF IRRIGATION

In planning a farm system of irrigation, or irrigation layout, the slope and configuration of the surface, the character of the soil and subsoil, the quantity of water available, and the manner in which it is delivered deserve careful consideration. The method of irrigation adopted is based mainly on these four factors. A knowledge of surface slopes can best be obtained by a contour survey in which lines of equal elevation are run across the farm at intervals of about 6 inches in vertical elevation. These reveal the highest as well as the lowest parts and also the slope in any direction. The farmer's delivery headgate can then be located at or near the highest point and the farm divided off into the requisite number of fields and lanes, a suitable site for the farmstead being reserved. The boundaries of fields and lanes also determine generally the location, direction, and length of the various permanent farm ditches, pipes, flumes, or other conduits. The character of the soil can best be determined by making borings with a soil tube or soil auger and examining the borings in each foot of depth. The water-right contract or certificate pertaining to the farm indicates the quantity of water available, and the regulations and by-laws of the company or other agency furnishing it indicate the manner in which it is delivered.

In the future reclamation of arid lands much labor and expense might be saved and greater profits obtained by providing each settler with a skillfully prepared plan of an irrigation layout for his farm. The execution of this plan need not be completely carried out during the first or even the second year of occupancy. Its chief value would be in giving him a proper start and in guiding his subsequent operations.

Besides the factors already discussed, crops and profits influence the shaping of the irrigation layout since a valuable crop yielding

high returns calls for a more expensive and permanent layout than a cheap crop yielding low returns. Hence it is not feasible to adopt one standard plan of layout for many farms unless conditions are exceptionally uniform. As a rule each plan is adapted in design and construction to serve best the needs of the farm for which it is intended.

The plan shown in Figure 5 is therefore intended to represent merely the general arrangement and the adaptation of methods to local conditions.

FARM DITCHES

Water is distributed over an irrigated farm during the crop-growing season by means of ditches, flumes, or pipes. The ditches are of two general kinds — temporary and permanent. Temporary ditches are formed in cultivated fields and last only a season, or less, after which they are leveled down and filled in by plow and cultivator in preparation for another crop. Permanent ditches are located usually along the margin of fields and are operated from year to year until modified by a change in the farm layout. To this latter class belongs the supply ditch which conveys water from the canal, stream, or other source of supply to the highest point of the farm.

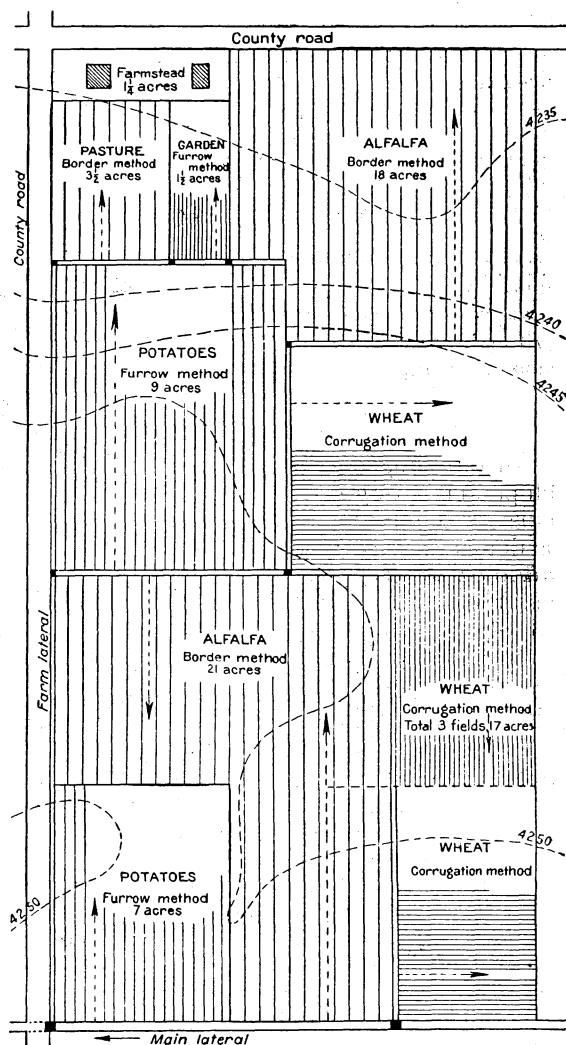


FIGURE 5.—The manner in which an 80-acre Idaho farm is irrigated

The flow of water in farm ditches should not be rapid enough to cause erosion, or sluggish enough to necessitate extra expense in providing large channels. Ordinary firm loam will not erode under a mean velocity of $2\frac{1}{2}$ feet per second, and for convenience in handling, this is about as fast as water should move in such channels. Some materials erode under slower velocities. Fine sand without any colloidal material to bind its particles is likely to erode in

velocities of $1\frac{1}{2}$ feet or less per second, sandy loam at $1\frac{3}{4}$ feet, and fine loam and silt at 2 feet per second.

The grade of ditches regulates the flow, but the proper grade to adopt in any given case depends also on the volume of water carried. The smaller the volume, the higher is the grade required for a given velocity. To illustrate: A ditch designed to carry 1.35 second-feet with a mean velocity of 2 feet per second should have a grade of about 1 foot in 100 feet, or 1 per cent; a ditch carrying 5 second-feet with the same mean velocity requires a grade of about 0.38 per cent; and a ditch carrying 10 second-feet at a mean velocity of 2 feet per second requires a grade of 0.22 per cent.

The capacity of the supply ditch and other permanent ditches depends on the method to be adopted in moistening the soil and also on the character of the water supply and the regulations governing

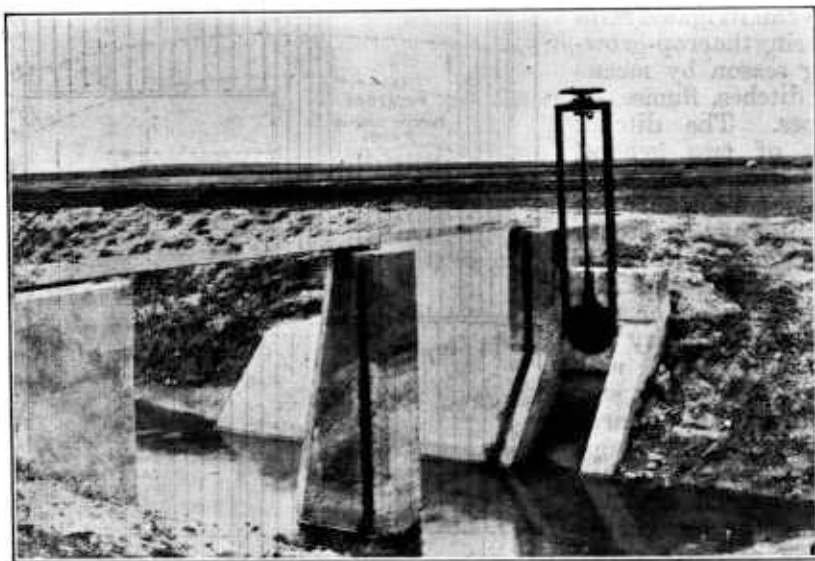


FIGURE 6.—A farmer's head gate and canal check

its delivery to users. If furrows are to be used mainly to wet the soil, a relatively small quantity of water or "head," varying from 1 to $2\frac{1}{2}$ second-feet, is required. Flooding from field laterals requires heads of from $1\frac{1}{2}$ to 3 second-feet, while borders and checks require from 3 to 10 second-feet and more, depending chiefly on the size of the border or check.

Some of the structures which constitute a necessary part of farm ditches are head gates or turnouts, measuring devices, division boxes, flumes, pipes, and check gates. These may be built of wood, concrete, steel, or combinations of these materials. A combined canal check and farmer's head gate built of concrete is shown in Figure 6. A common type of head gate made of steel is sketched in Figure 7.

In making small farm ditches after the ground is plowed, a ditch plow or lister is often used, followed by a small V-shaped crowder (fig. 8) and more or less hand dressing by shovels.

Medium-sized ditches may be made by wing plows or graders, and the large ditches by a wheeled scraper.

The cleaning of ditches is generally necessary in the early spring, although the removal of weeds by grazing is not confined to that season. In a ditch which erodes, the undercut banks need shaping, and in a ditch which silts, the deposits require removal. This may be done by hand shoveling or by any of the methods used in the original construction.

METHODS OF IRRIGATING ALFALFA

The methods of applying water to alfalfa differ widely because of the diversity of climates, soils and subsoils, ground-surface reliefs, the nature of water supplies, the sizes of farms, the funds available for preparing the land for water, the principal crops grown, and the early training and environment of irrigators.

The most common methods are the border method, the check method, flooding from field laterals, and the corrugation method, with their modifications. There are other less common methods practiced in a few localities, such as the portable-pipe method and the subirrigation method.

THE BORDER METHOD²

The border method consists essentially of the division of a field or tract into long, narrow strips

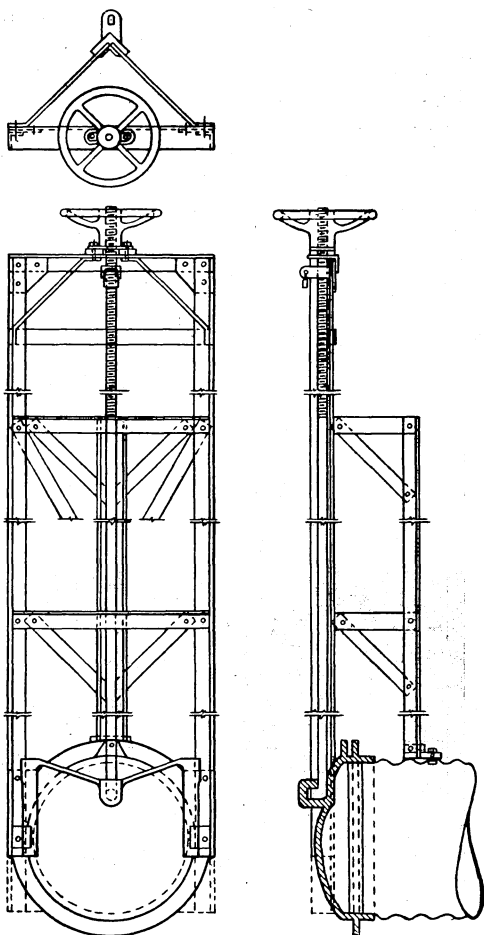


FIGURE 7.—Metal head gate attached to corrugated pipe

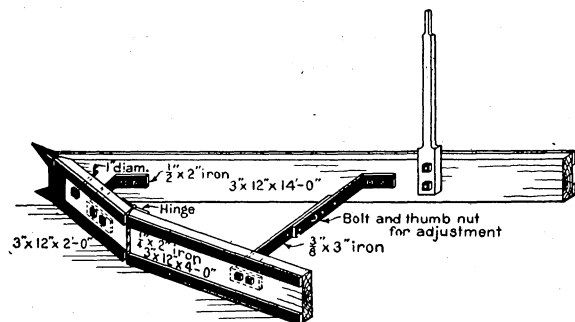


FIGURE 8.—An adjustable crowder

² Described in Farmers' Bul. 1243, The Border Method of Irrigation.

or lands by low, flat levees, which extend in the direction of the steepest slope, if this is not so great as to cause washing of the soil or difficulty in spreading water, and confine the water into single strips. (Fig. 9.) The bed of each strip is carefully graded to a uniform slope except at the upper end, which is level for a distance equal to the width of the strip. If the contour of the natural surface is such that a uniform slope can not be obtained without much grading, a curved gradient is not objectionable, provided it increases from top to bottom of the strip. According to Beckett and Brown, of the University of California, the size

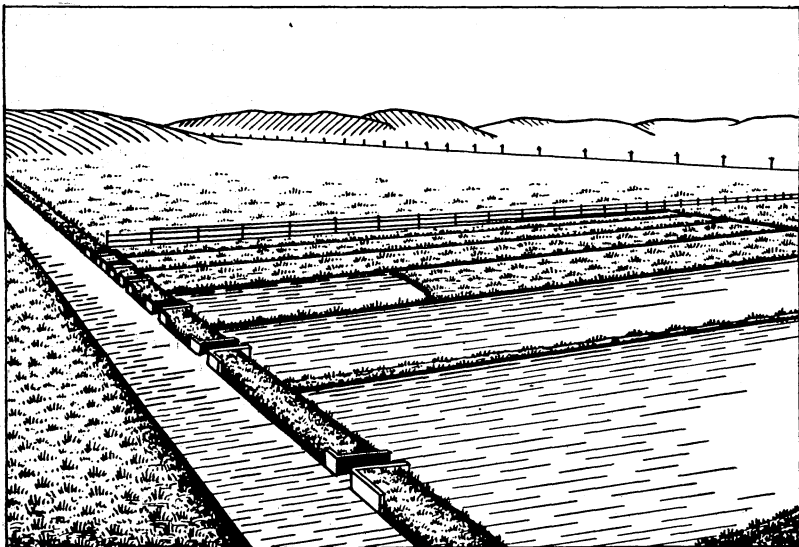


FIGURE 9.—Irrigation by the border method

of the strip depends mainly on the head of water used in flooding it and the type of soil. For heads varying from 1 to 8 second-feet and for the three main grades of soils, namely, sands, loams, and clays, they recommend the dimensions given in Table 1. They also recommend as the most desirable grades for strips when measured in inches per 100 feet: $1\frac{1}{4}$ to $3\frac{1}{2}$ inches for clay soils, $2\frac{1}{4}$ to 7 inches for loam soils, and $3\frac{1}{2}$ to 12 inches for sandy soils. In all types of soils, but especially in sandy soils, the top 20 to 30 feet of each strip should be formed without grade so as to permit the water to spread entirely across the strip before moving down the slope.

TABLE 1.—Border strip dimensions for three grades of soil

Head	Sand		Loam		Clay	
	Width	Length	Width	Length	Width	Length
<i>Second-feet</i>	<i>Feet</i>	<i>Feet</i>	<i>Feet</i>	<i>Feet</i>	<i>Feet</i>	<i>Feet</i>
1.....	20 to 30	200 to 300	30	300 to 400	30	440 to 660
1 to 2.....	30 to 40	300 to 400	30 to 40	440 to 660	30 to 40	660
2 to 4.....	30 to 40	440	40	440 to 660	50	660 to 800
4 to 8.....	40	440 to 600	50	660 to 880	50	880 to 1,320

The water to irrigate each strip is taken from the head ditch extending across the upper edge of the field and is controlled by an outlet box or border gate, although the gates are sometimes omitted to save in first cost of preparing for irrigation where the soil is not so light as to induce excessive washing. Check gates, canvas dams, or metal tappoons are used to hold up the water in the head ditch, causing it to flow into the strips. In many sections these temporary makeshifts are giving way to permanent structures, although the latter in many cases interfere with cleaning the ditches and increase its cost.

The border method is confined chiefly to the irrigation of alfalfa and grain, and in its various modifications is used extensively in Arizona, New Mexico, California, and, to a less extent, in Idaho, Utah, Montana, and other Rocky Mountain States. It is being adopted successfully also in Oregon and Washington. It can be used best under canals which deliver water to users in large streams, since the smallest head that can be applied successfully is seldom less than 2 or 3 cubic feet per second, while heads of 5 to 8 cubic feet per second are common. It is adapted especially to light, open soils, into which water percolates rapidly, as the use of a large stream confined between borders makes it possible to force water over the surface without great loss by percolation.

On the university farm at Davis, Calif., the strips or lands were formerly, on an average, about 50 feet wide by 900 feet long, but in recent years the widths have been reduced to 35 and 40 feet and the lengths to about 600 feet. Each border levee has a base 7 feet wide and is 12 inches high, when newly made, but settles to about 10 inches before the first crop is harvested. The bed of each strip is leveled crosswise and slopes regularly from top to bottom. In preparing the surface of this field the barley stubble was burned, then the soil was disked and roughly graded. The location of each border was marked out either by drag or by making a furrow. Sufficient earth to form the border was obtained by skimming the surface with scrapers. The scraper teams began next to the head ditch and worked down. They crossed and re-crossed the field at right angles to the borders, and as a scraper passed a border marking, it was dumped. Each scraper width of the borders was made up of two loads, but the last load overlapped the first by half the width of the scraper. The surface of each border was then leveled with an accuracy of 0.1 or 0.2 foot. The levees when first built were rough, irregular, and steep. They were cut down to a uniform grade by a reversible disk and then harrowed.

As noted, the size of strip and the head of water turned into it are more or less governed by the character of the soil. In sandy soil the spacing of borders varies from 20 to 30 feet in width and from 300 to 400 feet in length with a fairly large head, so as to wet the surface rapidly before much water is wasted by deep percolation. In retentive clay soils which absorb water slowly, longer runs are necessary, and a small quantity of water is allowed to run for a longer time. Sometimes, in heavy soils, low cross dikes are formed from side to side between borders, 100 feet or more apart, to pool the water and thus cause deeper moisture penetration.

Usually the only structures required are border gates to control the water entering each strip, and checks in the head ditch to raise the water level to such height that a sufficient volume will flow through the border gates. Border gates may be made of wood, a type of which is shown in Figure 10. However, untreated lumber is short-lived, and for permanent structures concrete is more economical although the first cost may be greater. A simple and inexpensive check gate in a head ditch is shown in Figure 11.

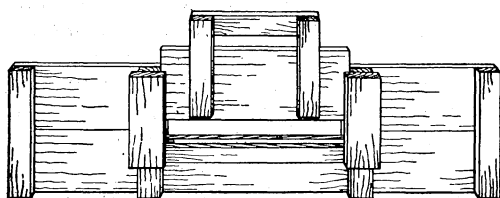


FIGURE 10.—Border gate of wood

THE CHECK METHOD

The essential provisions for irrigating by the check method consist in surrounding nearly level plots of ground with low levees, and conducting water to

each by means of a ditch and check box or gate. The spaces inclosed may be laid out in straight lines in both directions, so that their levee borders form a series of rectangles; or the levees may follow more or less closely the contour lines of the natural surface of the ground, thus forming contour checks. The most favorable conditions are a light, sandy soil on a comparatively even slope of 3 to 15 feet to the mile, supplied with an irrigation head of ample size.

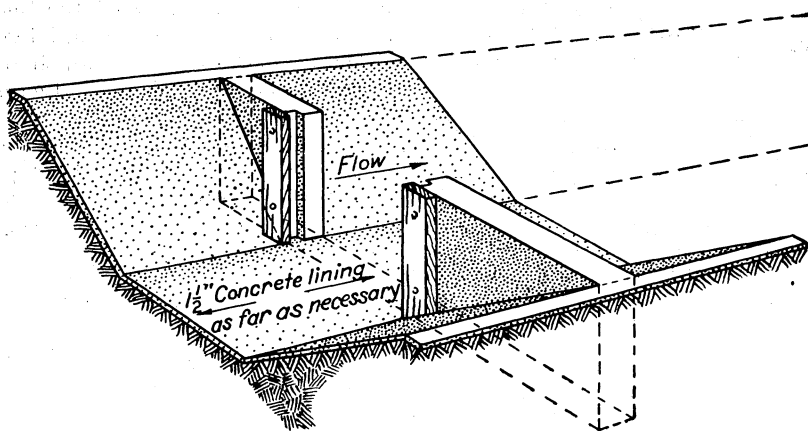


FIGURE 11.—Check gate in head ditch

This method is used also on heavy soils, where it is necessary to hold the water on the surface until it has percolated to the desired depth.

In California not only does the form of the checks vary, but their size as well, some of the smaller checks being less than one-half acre in area, while some of the larger contain more than 2 acres.

In the Modesto and Turlock irrigation districts the surface of the land under ditch slopes about 5 feet to the mile, and swales, hog wallows, and mounds make it too uneven to be irrigated without

first being leveled. The long side of each check should be on the flat slope and the short side on the steep slope. A fall of 3 to 5 inches between adjacent checks is best; usually it can be obtained by proper adjustment of the width of checks. The length of each rectangle will depend on the lengthwise slope as well as the location of the supply ditches. The field should be laid out in such a way that the levees may be built with a minimum handling of dirt. Rectangular checks possess many advantages over irregular contour checks, but if much good surface soil has to be removed in order to build the former, the advantages may be more than outweighed by the damage caused by grading and the extra cost.

On the west side of the San Joaquin Valley the land to be seeded to alfalfa is almost invariably formed into contour checks. The supply ditches are intended to be about 600 feet apart, and levees are built midway between them. The sides of the checks conform in a measure, but not exactly, to the natural contours, having a difference in elevation of 0.3 to 0.4 foot. Under ordinary conditions of soil and relief the cost of preparing dry-farmed land for check irrigation averages about \$25 per acre. Uncultivated desert land covered with shrubs is likely to cost 30 per cent more.

In the Modesto and Turlock irrigation districts the feed ditches are designed to carry large heads of 5 to 12 second-feet. These large heads are used by the farmers in turn for short periods of time, depending upon the acreage served. In the smaller checks a head of 5 second-feet will suffice, and if more water is available two or more checks may be irrigated simultaneously. Five second-feet flowing on a check containing 1 acre would cover it to a depth of about 5 inches in one hour. A part of the water so applied is always lost by evaporation, but the balance percolates into the soil to furnish moisture to the plants. The skillful irrigator begins with the highest checks and works down, for the reason that all water escaping through gopher holes or broken levees may be recovered and applied to dry checks. To reverse this order might result in over-irrigating the lower checks.

The chief advantage of the check method is that one man can attend to a larger volume of water and can irrigate 7 to 15 acres in 10 hours, making the cost of applying water less than that of any other method except possibly the border method. To counterbalance this important advantage, there are several handicaps which western farmers should consider. These are the removal of a considerable quantity of surface soil to form the levees, which frequently decreases the yield on the graded spots; the extra cost of preparing the land; the damage done to farm implements in crossing levees; and the fact that this method is not well adapted to a rotation of crops.

FLOODING FROM FIELD LATERALS

Flooding the surface of the ground from field laterals or small ditches is a common method of irrigating alfalfa. In Colorado, Wyoming, Montana, Utah, and Nevada, and to a less extent in other Western States, forage and cereal crops are irrigated in this way. This manner of wetting dry soil originated, it is believed, in the Mountain States, and the last half century has seen its gradual

extension, so that now it has not only become firmly established but is regarded as the method best suited to the conditions under which it is practiced. It can be profitably used on slopes that are too steep for other methods. Fields having a firm soil and a fall of 25 to 100 feet per mile have been flooded successfully. From this extreme the slope may diminish to less than 0.1 foot in 100 feet. Its cheapness is another feature which recommends it to the farmer of limited means. Ordinary raw land can be plowed and prepared for flooding at an expense of \$9 to \$15 an acre. Furthermore, the method is adapted to the use of small water supplies. In the Mountain States the irrigation systems have been planned and built to deliver water in comparatively small streams for use in flooding or in furrows, and water users should be certain that the larger volumes required for checks and borders can be secured before going to the expense of preparing their fields for either of these methods.

In grading the land for flooding it is not customary to make many changes in the natural surface. Only the smaller knolls are removed and deposited in the low places. An effort is made always, however,

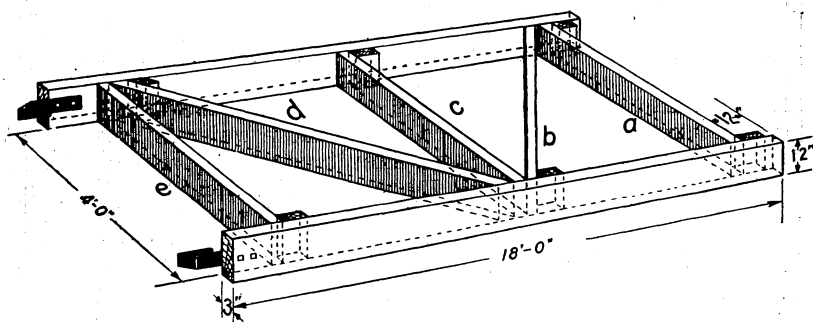


FIGURE 12.—Homemade drag or leveler: *a*, *b*, *c*, *d*, and *e* are shod with one-fourth by 4-inch steel edges

to make the farm laterals fit into the natural slope and configuration of the tract so as to bring the water to the high places. On steep slopes the laterals may be less than 50 feet apart; on flatter slopes, 200 feet or more. Whatever the spacing, it is always desirable to have the intervening slope as nearly uniform as possible. When the land in its natural state is uneven, the grading can be done by a scraper. If the field in its natural condition is comparatively smooth and level a homemade drag or leveler, as shown in Figure 12 serves the purpose fairly well.

The location of the ditches varies too widely to admit the adoption of a standard plan, but Figure 13 shows an arrangement of field laterals common to the Mountain States. A supply ditch, *ab*, is built on one side, and laterals *cd* and *ef*, branch out from it on a grade of 0.5 to 0.75 inch to the rod. These laterals are spaced 75 to 100 feet apart and are made with double-moldboard plows or listers, either walking or sulky type. Figure 14 illustrates another common method of irrigation.

In the vicinity of Fort Collins, Colo., the main lateral is built to the highest corner of the field, and the smaller laterals extend out

from it, spaced 75 to 225 feet apart, the spacing depending on the slope of the ground and the coarseness of the soil. The size of the laterals is governed by the available head, but on steep slopes and on soil that erodes readily small heads are best. Around Berthoud, Colo., the land is naturally of uniform, even slope, and little grading has been necessary. Heavy timber or iron drags are used to smooth the surface after it has been plowed so that the water will spread evenly. These implements are built in various ways and of whatever material is available. Worn steel rails are often used, two being coupled parallel about 30 inches apart. A team is hitched to each end of the drag upon which the driver rides. Going over a field once with such an implement usually is sufficient to make the surface uniform and smooth. The proper location for field laterals is evident to experienced irrigators without the use of surveying instruments, though in fields where the fall is slight it often is necessary to have a topographical survey made and the laterals located by an engineer. Field

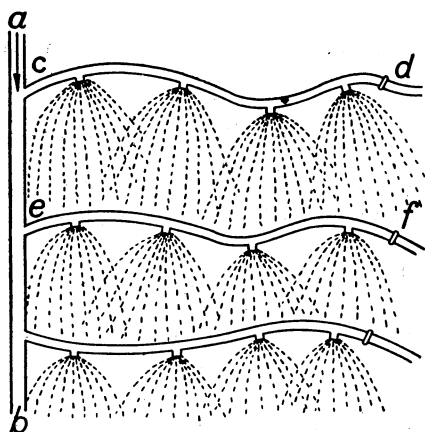


FIGURE 13.—A common method of locating field ditches in the Mountain States

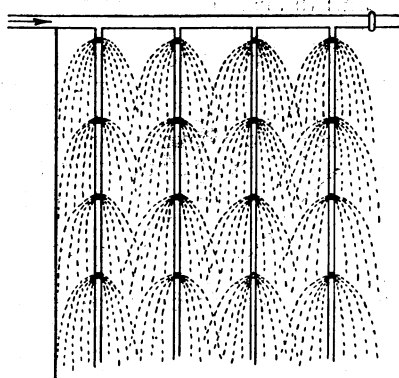


FIGURE 14.—Flooding fields from parallel field ditches

laterals always are so located that they cover the highest parts of the field, and for alfalfa their distance apart varies from 165 to 330 feet.

The head required for flooding from field laterals in northern Colorado varies from 2 to 3 cubic feet per second and is divided between two or three laterals. Canvas or coarse-manure dams are used to check the water in the laterals and force it out over the banks and down the slopes of the field. In less than three hours the upper foot of soil usually is thoroughly moistened. To apply one watering in this way costs from 50 to 75 cents an acre.

In Montana, where clover and alfalfa fields are to be flooded, the field ditches usually run across the field on a grade of 3 to 4½ inches per 100 feet. The spacing between ditches varies with the slopes, the smoothness of the surface, and the volume of water; but 80 feet is about an average. The head used is seldom less than 1½ or more than 4 cubic feet per second, the larger heads being divided between two or three ditches. A canvas dam is first inserted in each ditch or set of ditches, 75 to 100 feet below the head. The water is then

turned into each channel and flows as far as the dam, by which it is checked, and as a consequence it rises and flows over the low places of the lower bank, or through openings made with the shovel. When these small tracts have been watered, the canvas dam is moved down the lateral 75 to 100 feet, and again inserted in the channel to serve the next tract. In some sections it is customary to use two dams, one being placed below the other before the first is removed.

Manure or earth dams sometimes take the place of the movable canvas dams. After the ditches have been made, coarse manure is placed in small heaps within each ditch channel at suitable intervals, and each heap is covered with earth on its upper face to a depth of 1 to 2 inches. When this check has served its purpose it is broken and the water flows down until stopped by the next check. In some instances permanent wooden check boxes are inserted in each lateral, while in others the canvas dam is used. The thorough irrigation of 4 acres is considered a good 12 hours' work for one man. By using a head of 2 to $2\frac{1}{2}$ cubic feet per second, two men can irrigate 7 to 10 acres in 24 hours at a labor cost of 85 cents to \$1.25 per acre.

In the Salt Lake Basin the heads of water used by the irrigators of alfalfa vary considerably with the flow of the streams. Heads of 4 to 6 cubic feet per second are common in spring, while later in the season, when the streams are low, they are reduced to 1 to 3 cubic feet per second. A field usually is divided into strips 200 to 500 feet wide by laterals extending across it. A permanent wooden check box or a canvas dam is inserted in the main supply ditch below each cross ditch, causing the water to flow into the cross ditch. Thence it is spread over the surface through small openings in the ditch bank and any excess water is caught by the next lower ditch. In this way each ditch serves a double purpose, acting as a drainage channel for the land above it and as a supply channel for the land below it.

In summarizing the advantages of the flooding method, it may be said that in first cost it is one of the cheapest, it is adapted to the delivery of small volumes of water (1 to 2 cubic feet per second) in continuous streams, it is particularly well adapted to forage and cereal crops of all kinds, it does not require removal of the topsoil from the high places to fill up depressions, and firm soil can be watered successfully even when located on steep and irregular hillsides.

Its chief disadvantages are the fatiguing labor required to handle the water, the small area which one man can irrigate in a day, the difficulty involved in applying water after dark, and the unequal distribution of water on the field unless more than average care is exercised. The latter objection is important, since uneven distribution decreases crop returns and wastes water.

CORRUGATION METHOD

In that part of the Columbia River Basin comprising the major portions of Oregon, Washington, and Idaho, moistening the surface soil by flooding is not generally practiced. This may be due in part to the fact that the soils of the irrigated valleys are derived largely from lava eruptions and are disposed to puddle when wet and bake when dry.

Accordingly, the corrugation method is commonly used, which consists of allowing small streams of water to flow through a series of narrow, shallow furrows or corrugations. This method is more fully described in Farmers' Bulletin 1348 F., The Corrugation Method of Irrigation.

The spacing of the corrugations depends chiefly on the lateral movement of the soil moisture. In tight soils the lateral spread of water may not exceed 8 or 9 inches, in which case the spacing of the corrugations is limited to 16 or 18 inches, whereas in open porous soils the lateral spread of water may be 18 to 24 inches, and the corrugations are proportionately farther apart. It is well, however, to have the horizontal movement of water overlap to some extent to insure a thorough wetting of all the soil in the root zone; and in ordinary loam soils the corrugations are usually not more than 3 feet apart.

The corrugation method permits the distribution of soil moisture by capillarity and gravity. In lava soils a 12-hour run is usually sufficient to wet the soil in the root zone. In less permeable soils

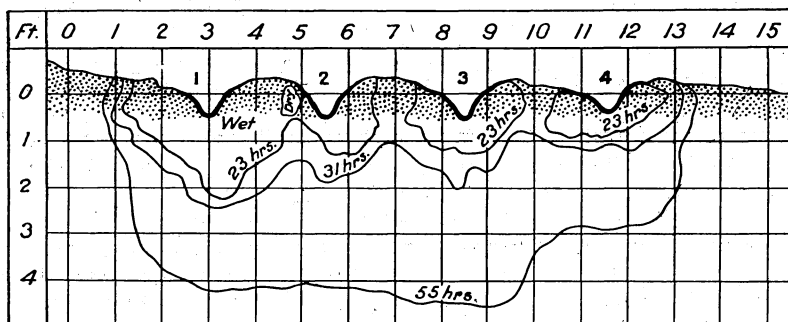


FIGURE 15.—Distribution of soil moisture from corrugations

the time required may be much longer. In the experiment illustrated in Figure 15 the water had reached a depth of $1\frac{1}{2}$ feet below the bottom of corrugation 1 at the end of 23 hours, and in 8 more hours had sunk about 6 inches farther. Corrugations 1 and 2 were $2\frac{1}{2}$ feet apart, and the water from them united in 23 hours to form a continuous curve with a cross-sectional wetted area of $7\frac{1}{2}$ square feet. Corrugations 3 and 4 were 3 feet apart, and for 23 hours the wetted area of each remained distinct, the former being $1\frac{1}{4}$ square feet and the latter $1\frac{3}{4}$ square feet. At the end of 31 hours the wetted sections of all had united, forming an irregular outline and comprising a total wetted area of about 18 square feet. At the end of 55 hours after the irrigation was begun the water had penetrated to a depth of $4\frac{1}{2}$ feet and had wet about 42 square feet.

The alfalfa grown in the Yakima Valley, Wash., is practically all irrigated by means of corrugations. The grading is usually done by buck scrapers (fig. 16); while a long, rectangular drag similar to the one shown in Figure 12, removes most of the surface inequalities remaining after the surface has been leveled roughly by the scraper.

The common practice is to run the furrows across the entire width or length of a field, and in consequence their length varies from 330 feet or less in small fields to 1,320 feet in large fields. Such furrows are usually too long. Farmers object to cutting up a field by head ditches, but in a climate like that of the Yakima Valley in midsummer

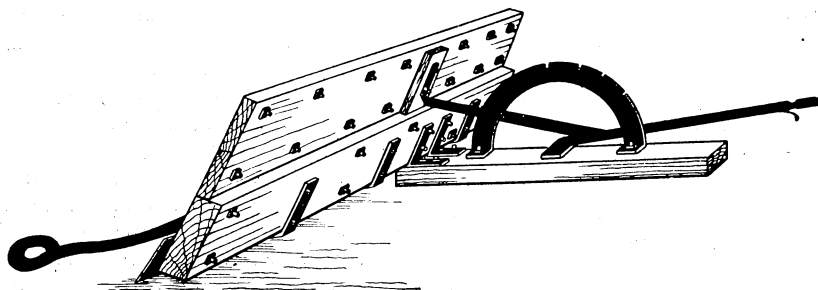


FIGURE 16.—Buck scraper

by far the most essential element in plant production is water, and all other considerations should give place to it. It has been shown that water is rarely distributed evenly in furrow irrigation and that much is lost by deep percolation. To increase the length of a

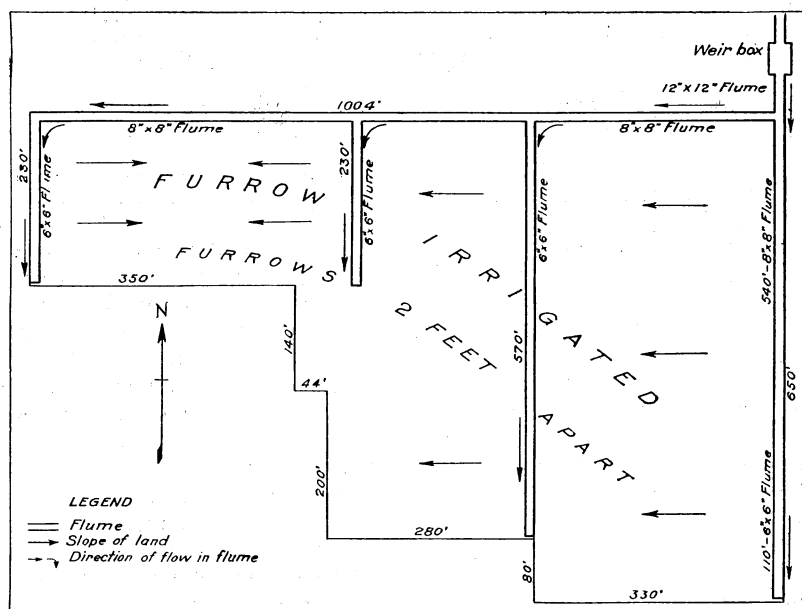


FIGURE 17.—An alfalfa field at Kennewick, Wash., irrigated by the corrugation method

corrugation much beyond 400 feet not only increases the loss but renders a uniform distribution more difficult to secure. Except in rare cases, this distance should be regarded as the limit for the length of furrows. In light, sandy soils having a porous underlying gravel stratum the length may well be reduced to 250 feet.

Figure 17 shows the manner of dividing an alfalfa field for the corrugation method at Kennewick, Wash. Wooden head flumes, either 8 by 8 inches or 6 by 6 inches, are placed along the upper boundary of each strip. Auger holes are bored through one side of the flume flush with the floor at points where water is to be delivered to the heads of furrows. A short piece of lath revolving on a nail controls the flow from each opening. Where the grade is steep, a cleat nailed crosswise to the floor of the flume just below each opening will dam back the water and increase the discharge.

When flumes are too costly the water is distributed to the furrows through wooden spouts set in the bank of an ordinary ditch. These head ditches when in operation are divided into a series of level sections by means of drop boxes which hold the surface of the water at the desired elevation. The spacing of these structures depends on the grade of the head ditch, and their cost averages about \$4 each. Spouts are made usually by nailing together four laths. In most communities a special lath is available, which is somewhat heavier than the one used as backing for plaster walls, being one-half inch thick, 2 inches wide, and 3 feet long. Four of these when nailed together cost about 7 cents, and each spout in place costs about 13 cents. Assuming that they are spaced 4 feet apart, the spouts for a square tract of 10 acres would cost \$21.50 or slightly more than \$2 per acre. Tin tubes, one-half inch in diameter, one to each furrow,

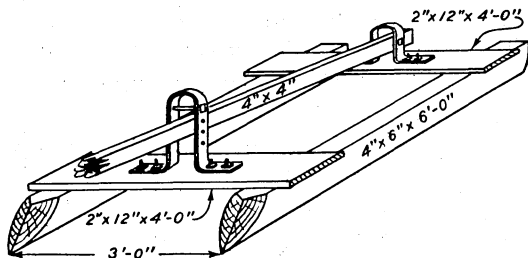


FIGURE 18.—Furrowing sled used to make corrugations

have sometimes been used instead of the wooden tubes. When these tubes are set one-half inch below the water surface, each tube discharges about 0.1 miner's inch, which is about right for a slope of 3 per cent. The length of the tin tubes is governed by the size of the ditch bank. The tubes are set while the water is in the ditch and are kept at the same level between check boxes. The cost of tin tubes 2 feet long is about \$5.50 per hundred. In many places neither flumes nor tubes are used. Water is taken through cuts in the ditch bank and divided among the corrugations as evenly as possible by directing it with a shovel. This practice reduces the cost of preparing the land for irrigation, but it increases the cost of applying water, and does not secure an even distribution.

Corrugations in alfalfa fields are most commonly made by the use of a furrowing sled. (Fig. 18.) Sleds with three runners are sometimes used, which reduce the time required for furrowing but do not produce furrows quite so satisfactory, since an obstruction under one of the outside runners will lift it and the middle runner and perhaps leave obstructions in the two furrows, which, if not removed, will cause the flooding of the surface when water is applied.

For the irrigation of most of the crops grown in the vicinity of Twin Falls, Idaho, the feed ditches are laid out across the field

as nearly parallel as possible, on a grade of 2 to 6 inches to 100 feet, and 300 to 500 feet apart. Corrugations are made in the direction of the greatest slope and approximately at right angles to the feed ditches. From the upper end of the field downward, a wooden check is inserted in the ditch at the end of each fall of 12 inches. Thus, if the ditch has a fall of 4 inches to 100 feet the checks

are placed 300 feet apart. Each check box is provided with a removable flashboard which, when in place, backs the water to the next check above and at the same time permits the surplus water to flow over its top to supply the checks below.

Lath tubes are inserted in the lower ditch bank about 3 inches below the water level established by the flashboards when in place. These tubes are inserted while the check is full of water in order that

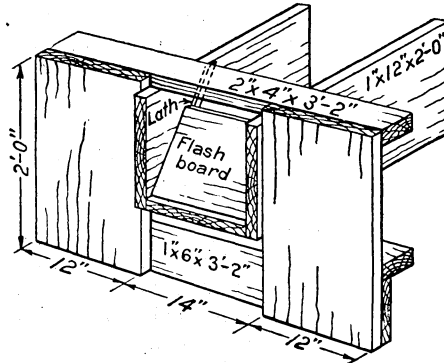


FIGURE 19.—Check box made of lumber

all of each set may be on the same level and that water may be had for puddling. The flow from each tube may be divided among several furrows. Ordinarily a 40-acre farm will require about 30 check boxes and 1,800 tubes. The check box shown in Figure 19 calls for 17 feet board measure of lumber, but a serviceable box can be made out of old packing boxes.

Some of the advantages of this method over ordinary furrow irrigation are that it makes possible the utilization of land having steep slopes and that it provides a constant head over the inlets of each set of tubes while the surplus passes down the field ditch. Its chief disadvantage is that it is wasteful of water.

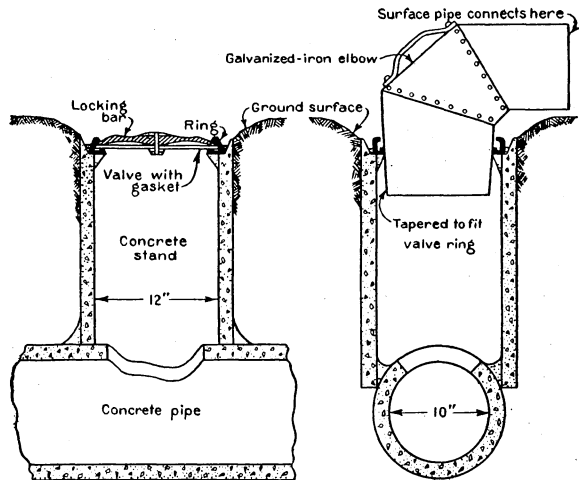


FIGURE 20.—Stand in concrete pipe

IRRIGATING ALFALFA WITH PUMPED WELL WATER AND PORTABLE PIPE

In southern California, where large areas of alfalfa are irrigated with water pumped from wells, at high expense, great care is exercised to prevent its waste. Concrete pipe lines are laid to

convey water from the pumping plants to the fields. These are 10 or 12 inches in diameter. The head lines, along the high sides of fields, are provided with stands about 100 feet apart. The type of stand used most commonly is illustrated in Figure 20. A section of 12-inch concrete pipe is cemented to the supply pipe. This is provided with a removable valve, permitting the insertion of an 8-inch galvanized-iron elbow, to which the distributing pipe can be attached. As shown, the top of the stand and valve is several inches below the general ground surface so as not to obstruct mowing machines. The 10-inch valve, which is used with a 12-inch standpipe, costs about \$5 installed.

In many instances water is forced through the pipe line by the pump, and usually an open standpipe is placed in the line near the pump to relieve the pressure on the pipe line when all valves are closed.

The cost of a head line for 40 acres, with 1,300 feet of 10-inch pipe, laid at 35 cents per foot, 12 stands and valves at \$7.75 each, and 1 basin at \$10, is \$558. Iron stands more convenient to open and close are not yet in general use because of their greater cost. Portable slip-joint pipe is attached to the stands in turn, and through it water is conveyed to all parts of the field. (Fig. 21.) This pipe is made

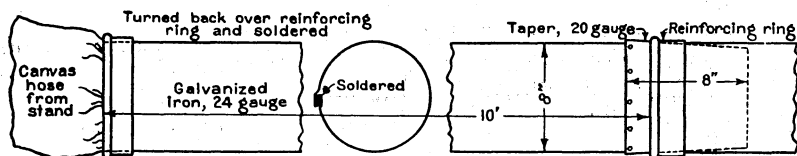


FIGURE 21.—Portable slip-joint metal pipe

of galvanized iron, usually 24 gage. It is 8 inches in diameter and is assembled in sections of several lengths, but the shorter lengths of 10 feet have been found to be most durable, and are preferred. The sections of some pipe of latest manufacture are 10 feet long, each being made of a single sheet of metal. Aside from the circumferential seam at one end, where the taper begins, a section of this pipe has only a longitudinal seam, which is soldered.

With a head of 60 miner's inches, one man can irrigate $2\frac{1}{2}$ acres in a 10-hour day. To irrigate a field the water is used from one stand for a strip equal in width to the distance between stands and with length from the head to the foot of the field. Since without reservoirs there must be an outlet for the water whenever the pump is in operation, it is best to have one stand open temporarily while the surface pipe is being connected to another. The best way to irrigate with surface pipe is to begin applying water at the upper end of the strip, and proceed toward the lower end by adding sections of pipe.

When care is used there need be no waste and no draining of surface water to prevent scalding. If too much water is being applied, it will flow down the field, and as the work approaches the lower side, it is easy for the irrigator to make proper allowance for the surplus. When one strip has been watered he begins at the upper end of the line by carrying the pipe across to the new location, section by section. The second stand is opened and the new connection made

before the first stand is closed. The leakage at the joints of pipes is slight, and the loss is not of consequence since it occurs on the land being watered.

The advantages of irrigation with portable pipe may be summarized briefly as follows:

A small stream may be handled effectively over a large area, and the irrigator may apply the stream on any part of the field he desires.

Losses which otherwise would occur by seepage in the conveyance of water over a field are prevented, and loss through gopher and squirrel holes is much reduced.

The fact that no field laterals are required effects a direct saving in the crop-producing area of a field, as well as in the time required to construct and repair these laterals.

With no laterals and the surface of the land free from obstructions, crops can be harvested with greater ease and with less wear and tear on farming machinery.

Land can be irrigated with little or no preparation, although it is better to level it to some extent if it is at all uneven.

Introduction of noxious weeds into a field is less likely to occur.

The disadvantages are:

Initial cost is high, especially where underground pipes form a part of the system.

Depreciation is high even under careful handling.

Leakage can not be wholly prevented.

The labor involved is onerous.

It is necessary to have pressure head on pipe in order that a fair-sized stream may be carried in conduits of medium sectional area.

Field irrigation with portable pipes undoubtedly is impracticable in many sections of the West on account of the high cost and other disadvantages. However, other sections, like southern California, possessing a scanty water supply, could well adopt the practice and thus extend the area watered with their small supply.

THE SUBIRRIGATION METHOD

Alfalfa is usually irrigated from the surface by one of the methods previously described. However, a small percentage of alfalfa lands—probably not more than 5 per cent of the total—is irrigated from below.

Frequently the seepage water from porous, earthen ditches and the waste water from irrigated areas passes through the subsoil of lower fields sufficiently near the surface to subirrigate them. In other places these seepage waters collect at the lower levels and raise the ground water near enough the surface to supply the plants with the needed moisture. It is questionable whether alfalfa growers should place much dependence on this mode of supplying moisture. What is gained in not having to irrigate usually is more than lost in damage done to both soil and crop by the rise of the ground water, which is almost certain to be followed by an accumulation of alkali near the surface if it is at all prevalent in the soil. Moreover, the fact that an alfalfa field subirrigates is usually an indication that the ground water is rising dangerously near the surface, and observations should be made to determine whether the level is above the danger limit.

One of the best ways of making such determinations is by means of test wells. These are made by boring holes from 2 to 4 inches

in diameter in different parts of the field and noting at regular intervals the elevation of the ground water in each. Where the subsoil is a clay or a clay loam no lining will be necessary other than a joint of drain tile or a short wooden tube. Where the subsoil is loose it may be necessary to line the wells with thin galvanized iron or a wooden box. The wells may be connected by a line of levels, the elevations being taken on the tops of stakes driven beside the wells. These well records, if taken at monthly intervals for several years, will show at a glance not only the position of the ground water, but also its rise and fall throughout the seasons. Whenever it is found that the water table stands for any considerable time at less than 4 feet from the surface there is reason for alarm, and measures should be taken to prevent such an accumulation of seepage waters or to remove the surplus by drainage.

Alfalfa is subirrigated also from the flood planes of streams. On bottoms the danger from alkali is not great, because little is present and the height of the ground water is governed by the condition of the stream. It often happens that when the water table is at its highest point the alfalfa plants are dormant or nearly so, and as a result are not injured readily.

In the vicinity of St. Anthony, Idaho, there is a subirrigated area of about 60,000 acres. Water is conveyed to the farms of this tract in the usual way and is then diverted into shallow field ditches. These ditches are about 3 feet wide and 6 inches deep, are spaced 100 to 300 feet apart, and extend lengthwise of the field. Crops are planted in the spring when the ground water is low; then a stream is turned into each ditch and kept there day and night until the ground water rises near enough to the surface to supply the moisture needed by the plant roots. Thereafter the height of the ground water is regulated by the quantity of water turned into the supply ditch. The rise and fall of the ground water is determined by means of small boxes set in the ground 3 to 5 feet deep. Twenty to thirty boxes usually are required for each 80-acre farm. About half the water is turned out of the main canal prior to September 15 to permit the land to dry for the harvesting of crops. After the crops are removed, a small stream is left running in the main canal all winter, but notwithstanding this supply the ground water usually falls 6 to 20 feet below the surface during the fall and winter months.

QUANTITY OF WATER REQUIRED

Alfalfa requires more water than most crops. This is accounted for readily by the character of the plant, the rapidity with which it grows, the number of crops produced in a season, and the heavy seasonal tonnage obtained. Its roots are not only deep but well distributed to draw plant food from the most fertile layers of soil and moisture from the wettest layers, while that part which is above ground is well provided with leaves from which water is transpired in large quantities. The rate of growth varies with soil, temperature, and other factors, but under favorable conditions a crop matures in about 35 days. Where the soil moisture is derived solely from an annual precipitation of 20 inches or less, little moisture may remain in the root zone after the first crop is harvested and a second crop can not be grown. However, if most of the rain occurs in the summer the

second crop may be the larger. In other localities killing frosts shorten the growing period to such an extent that only one or two cuttings in a season can be made. Ordinarily, however, when the deficiency in rainfall is made up by irrigation and the period of growth is long enough, three to six crops are harvested, yielding a seasonal tonnage of 3 to 7 tons per acre.

There is a wide variation in the seasonal quantity of irrigation water required by alfalfa. Two of the most influential factors are climate and soils. Temperature determines the length of the growing period and the number of crops that can be grown yearly, while precipitation if it is effective, lessens the quantity of irrigation water needed. The quantity of irrigation water needed under an effective rainfall of 12 inches is obviously less than it is under an effective rainfall of 3 inches. Soils cause a variation in that more water is wasted in irrigating pervious than impervious soils.

Many experiments have been made by the Bureau of Public Roads, to determine the water requirement of alfalfa. Some of these experiments were made in tanks under controlled conditions, others on plots under partially controlled conditions, and the remainder on selected fields.

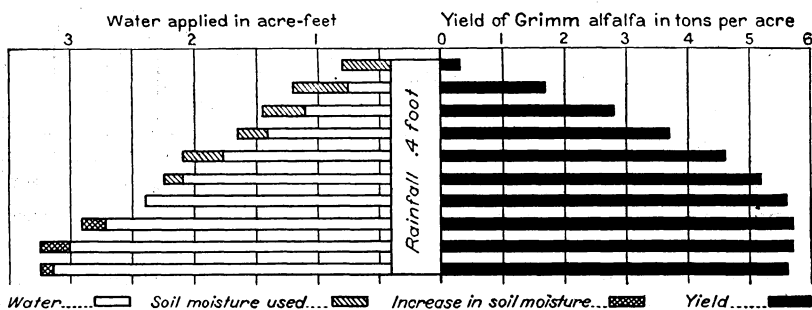


FIGURE 22.—Yields of alfalfa obtained by the use of various quantities of water at Brooks, Alberta

The results from the tank experiments seem to establish the following facts: (1) For the first few months the energies of the plant are devoted more to the establishment of a root system than to the production of stems and foliage; (2) the least demands for water occur in early spring, by reason of low temperatures and other unfavorable conditions, and immediately after a crop is harvested; (3) the demand for water is fairly constant during growth but tends to increase slightly up to the blooming stage; and (4) within a narrow range the consumption of water by the alfalfa is fairly constant, regardless of the quantity of water applied during the season or at each irrigation.

In southern Alberta experiments to determine the water requirements of alfalfa were carried on by the Dominion Government. The mean results of four seasons of plot experiments are shown graphically in Figure 22. The plot which received no irrigation water, as indicated in the first line at the left of the graph, and 0.4 foot of rainfall, drew on the soil moisture to the extent of another 0.4 foot in order to produce one-third ton per acre. The second plot received 0.35 foot of irrigation water in addition to the rainfall but also

drew on the soil moisture for 0.45 foot to produce a yield of 1.7 tons per acre. Similarly the third, fourth, fifth, and sixth plots, which received, in the order given, increased quantities of irrigation water, likewise obtained more or less additional moisture from the soil. In the seventh plot, which received a total quantity of 2.4 feet, the needs of the plants for water seemed to have been satisfied, since there was slightly more moisture in the soil at the close of the season than at the beginning. Nevertheless plot 8 required 2.9 feet of water in all to produce the maximum seasonal yield of 5.7 tons per acre, although nearly 0.3 foot remained in the soil unutilized. Beyond this stage the additional water applied tended to decrease slightly the seasonal yield.

Similar experiments carried on by the author at the Montana Agricultural Experiment Station, Bozeman, Mont., showed a variation in yield of from 4.61 tons per acre with the application of 1.2 feet of irrigation water and rainfall to 7.68 tons per acre when a total depth of 3.7 feet was applied.

In the Yellowstone Valley, Mont., two heavy crops and a third light crop can usually be grown. Nearly half of the yearly precipi-

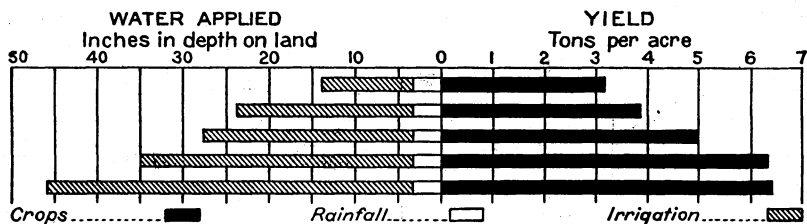


FIGURE 23.—Relationship between average yield of alfalfa and average water applied at Gooding, Idaho

tation of 14 inches occurs in April, May, and June, so that the first crop is far advanced before irrigation water is required. Experiments carried on for three years showed that with an average seasonal application of 2.56 acre-feet of water per acre, including rainfall, the average yield of hay was 4.15 tons per acre.

In similar investigations in northern Colorado the six alfalfa fields which produced the highest yields (4 to 6 tons per acre) used 3.23 acre-feet of water, including rainfall. In the lower Arkansas Valley of Colorado an average yield of 3.21 tons of hay per acre was secured with the use of 3.23 acre-feet of water.

The results of tests to determine the most economical use of irrigation water on alfalfa in southern Idaho are shown graphically in Figure 23.

In New Mexico a seasonal yield of 5 to 6 tons of hay per acre requires on an average about 4.25 acre-feet of water.

The results of plot experiments at Davis and Delhi, Calif., are shown in Figure 24.

NUMBER AND FREQUENCY OF IRRIGATIONS

The water requirements of alfalfa exceed those of almost any other crop. This plant possesses a large and well-distributed root system, which develops early in its life and requires considerable

water for its proper maintenance. These two major factors should be kept in mind in irrigating alfalfa. Except during its dormant stages, the plant should be furnished with sufficient water to enable it to grow continuously at a maximum rate. It is true that the cutting and removal of a crop produces a radical change, since less water is needed until the foliage of the subsequent crop again demands its adequate quota of water. Except during this interval, however, about the same quantity of water is needed during the entire period of growth.

Alfalfa commonly receives careless treatment at the hands of western irrigators. When water is available and is not needed for other crops it usually is turned on the alfalfa fields or meadows whether they need it or not. There is no question that yields of alfalfa and the life of the stand might be increased considerably if more care were used in finding out when to apply water. In each kind of soil and under any given set of climatic conditions there is a certain range of soil-moisture condition which will give the best results.

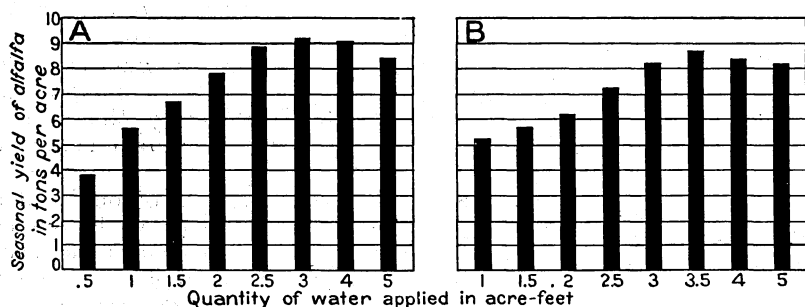


FIGURE 24.—Results of plot experiments (A) at Davis, and (B) at Delhi, Calif.

There is a considerable range between the moisture percentage at which the soil is too wet for a normal growth of the crop and that at which it is too dry. To use water most economically the limits of soil moisture percentages within which the crop grows best should be determined, and the practice adopted should be such as to keep the soil moisture within these limits at all times.

Under the present unskillful practice it is impossible to maintain uniform soil-moisture conditions for any length of time. The soil is likely to receive too much or too little water, or else it is deluged with cold water at a time when it needs only heat and air. The number of irrigations required depends upon the depth and nature of the soil, the method of applying water, the depth to ground water, the number of cuttings, and the rainfall, temperature, and wind movement. The number of irrigations and the time of irrigating depend to a considerable extent on the number of cuttings and the time of cutting. It is necessary to have the fields dry enough to permit the use of machinery for harvesting the crop, and consequently they can not be irrigated just before the cutting. But if light soils are not irrigated before the cutting, they may not retain enough moisture to start the new crop and maintain its

growth until the old crop is removed. Usually it is considered the best practice to irrigate as late as possible before the cutting and again after the crop is removed if more water is needed.

Other things being equal, more frequent waterings are required in the warm sections of the Southwest than in the cooler portions of the North. The number of irrigations per year for alfalfa ranges from 3 in Montana and Wyoming to as many as 12 in parts of California and Arizona. In localities where water is scarce during part of the season the number of irrigations, as well as the amount of water used each time, depend on the available supply. It is a common practice to apply frequent and heavy irrigations in the spring when water is abundant and to water less often and more sparingly when the supply is low.

RISE OF GROUND WATER AND ITS EFFECTS ON ALFALFA

In their natural state the typical soils of the arid region are characterized by their looseness, dryness, and absence of high water table. The diversion and use of large quantities of water in irrigation soon change some of these natural conditions. A part of the flow in earthen channels escapes by seepage and still larger quantities percolate into the subsoil from heavy surface irrigations. The waste water from these and other sources collects in time at the lower levels and raises the ground water. Usually this rise is noticed first in wells, a permanent rise of 5 feet in a year being not uncommon.

This rise of the ground water is an advantage, provided it does not go too high. It lessens greatly the cost of sinking wells, reduces the quantity of water needed in irrigation, and furnishes a reservoir from which water can be pumped to supply other lands.

It is not until the water level encroaches upon the feeding zone of valuable plants that its injurious effects are felt by the farmer. Its near approach to the surface may prove so disastrous that its upward trend should be noted with the greatest care. A series of test wells provides the best means of making such observations.

There is some difference of opinion as to what subsurface depth marks the danger line for alfalfa. It has been shown by soil physicists that water may be withdrawn by capillarity from saturated soils to depths varying from 4 to nearly 5 feet, depending on the character of the soil. This fact is important because when the ground water is brought to the surface and evaporated the salts held in solution are deposited at or near the surface. If these salts are sodium salts, they are usually grouped under the common term "alkali," and their accumulation at and near the surface will in time destroy the alfalfa. Therefore when alkali is present in harmful quantities in the ground water, the water should not be allowed to rise to a height where the effect of the alkali will be felt within 4 feet of the surface.

In soils free from alkali but saturated with water there is not the same necessity for holding the ground water continuously below the so-called "danger line." In parts of Kern County, Calif., the ground water sinks to 8 feet below the surface of alfalfa fields in summer, but rises to within 1.5 feet of the surface in winter.

There is no indication of root rot, and the plants have retained their full vigor. Numerous cases might be cited to show that the rise of water to within a foot or two of the surface for comparatively short periods of time does little injury to the plants. On the other hand, wherever water stands continuously during the irrigation season within a foot or two of the surface it is almost certain to destroy in time that part of the tap root which is submerged.

The remedy to apply to a high ground-water level is drainage by means of open ditches, covered tiles, or by pumping from wells, but much can be accomplished by the exercise of preventive measures in allowing less waste water to accumulate in the soil and subsoil.